

STOP!

BEFORE INSTALLING OR CONNECTING IK-WB02A TO YOUR PC, READ THIS QUICK START GUIDE

THANK YOU
TOSHIBA

Quick Start Guide


Quick Start Guide for Network connection

The following software must be downloaded and installed before installing the IK-WB02A:

- Internet Explorer™ Version 6.0 or later
<http://www.microsoft.com/windows/ie>
- Toshiba Camera Finder software

The software is included on the supplied mini CD-ROM.

- 1) Connect the IK-WB02A to your network using a Cat5/ Ethernet cable BEFORE powering on your camera. Repeat this step for any additional cameras.

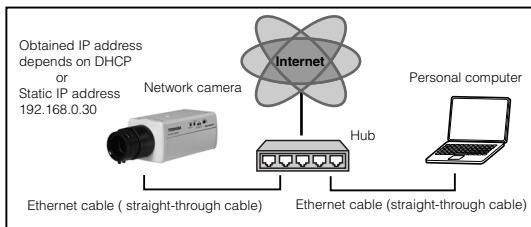

- 2) Power on your devices in the following order: cable or DSL modem, router or hub, PCs.
- 3) Power on the IK-WB02A.

Quick Start Guide (Cont.)

- 4) Run the Toshiba Camera Finder software to automatically detect your cameras. Refer to the Operations Manual for more details.
- 5) If the camera is not found, power off the camera and repeat the above steps. (The camera takes approximately 30 seconds to start.)
- 6) Click on User.

If you do not have a static IP address for your Internet connection, Toshiba offers DDNS service that will allow you to have an Internet address for your camera.

- 1) Register for Toshiba's DDNS service by clicking on the link IK-WB02A settings under Configuration > DDns Settings.
- 2) Follow the instructions to set up your account.


Quick Start Guide for Direct* PC connection

* A Cat5 Crossover cable is required.

The following software must be downloaded and installed before installing the IK-WB02A:

- Internet Explorer™ Version 6.0 or later
<http://www.microsoft.com/windows/ie>
- Toshiba Camera Finder software
The software is included on the supplied mini CD-ROM.

- 1) Connect the IK-WB02A to your PC using a Cat5 Crossover cable BEFORE powering on your camera.

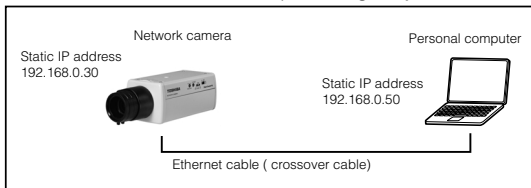

- 2) Change the IP address of your PC to Use the following IP address:
IP address: 192.168.0.50
Subnet mask: 255.255.255.0
Refer to the Operations Manual for more information.
- 3) Power on the IK-WB02A.
- 4) Run the Toshiba Camera Finder software to automatically detect your cameras. Refer to the Operations Manual for more details.
- 5) If the camera is not found, power off the camera and repeat the above steps. (The camera takes approximately 30 seconds to start.)
- 6) Click on User.

If you do not have a static IP address for your Internet connection, Toshiba offers DDNS service that will allow you to have an Internet address for your camera.

- 1) Register for Toshiba's DDNS service by clicking on the link IK-WB02A settings under Configuration > DDNS Settings.
- 2) Follow the instructions to set up your account.

Changing the Login ID and Password

Be sure to change the default login ID and password. You are able to change important information and settings of the camera through the Administrator Login. To have higher security, be sure to change your login ID and the password. Also, set the access rights because if they are not set, everybody who logs in will be regarded as an administrator.

- 1) From the Configuration menu, click Admin.

Quick Start Guide (Cont.)

TOSHIBA
Network Camera

System
User
Admin
Alarm
Network
Mail
FTP client
FTP server

Admin Settings (http://192.168.0.30) [Back to camera window](#)

Change ID/Password

Current login ID:

Current Password:

New login ID:

New Password:

New Password(Confirm):

Sound

- 2) Enter “root” in the Current login ID field and “ikwb” in the Current Password field.
- 3) Enter a new login ID in the New login ID field and a new password in the New Password field and New Password (Confirm) field.
- 4) Click the Change button.
- 5) Close the browser.

Setting the Access Rights

You can set a user ID and password to be requested when accessing the network camera.

- 1) From the Configuration menu, click User.

TOSHIBA
Network Camera

System
User
Admin
Alarm
Network
Mail
FTP client
FTP server

User Settings (http://192.168.0.30:80) [Back to camera window](#)

User authorization required:
☒ ON ☐ OFF

Add a user or change password:
User ID:

Password:

Confirm:

- 2) Set “User authorization required” to ON.
- 3) Click the Set button.
 - The user name and password input screen appears.
- 4) Enter the administrator ID and password in the user name and password fields, and click the OK button.
- 5) Close the browser.